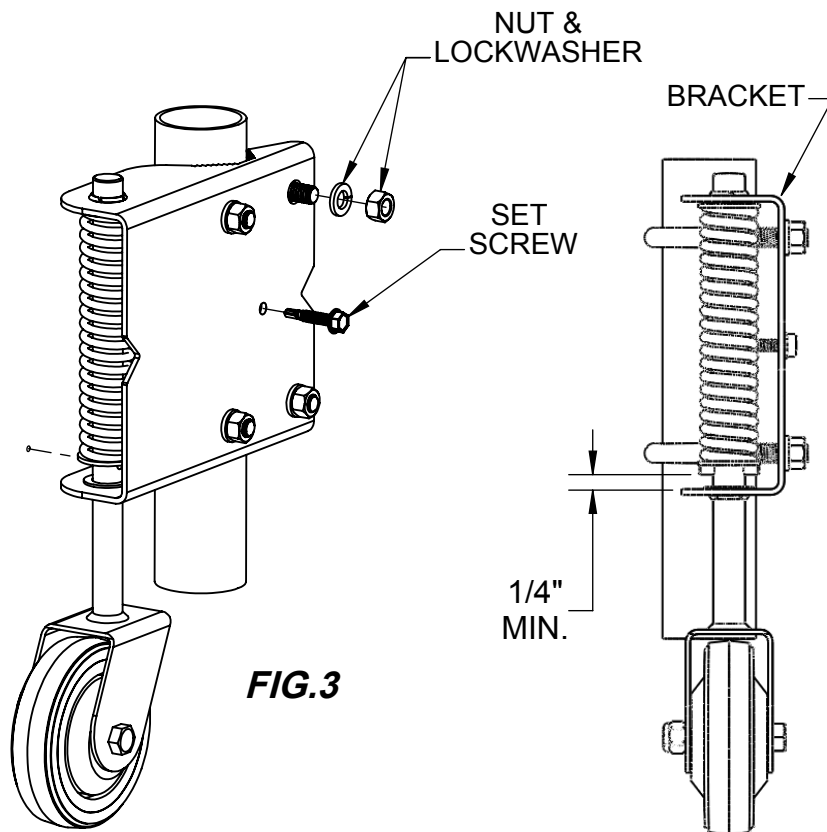
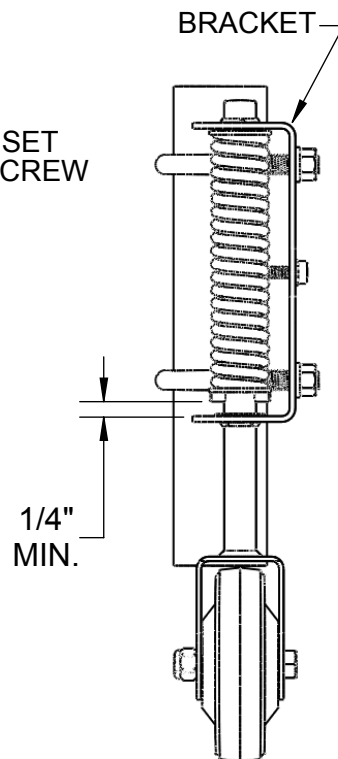
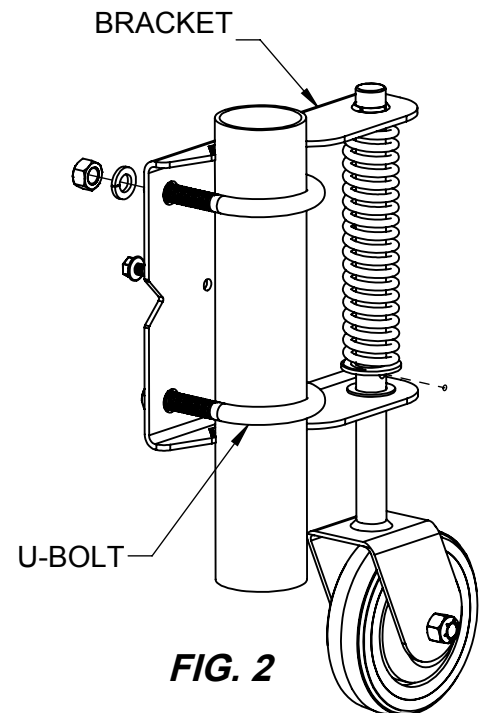


GATE WHEEL MOUNTING INSTRUCTIONS

MOUNTING INSTRUCTIONS:

1. LOCATE GATE WHEEL ASSEMBLY ON GATE AS REQUIRED. LOOSELY INSTALL THE SUPPLIED U-BOLTS, LOCKWASERS & NUTS. (FIG. 2 & 3)
2. PRESS DOWN ON BRACKET TO COMPRESS THE SPRING A MINIMUM OF 1/4" (FIG. 1)
3. MAKING SURE THE SPRING IS COMPRESSED AND THE GATE WHEEL IS LOCATED CORRECTLY, TIGHTEN THE NUTS & LOCKWASHERS TO THE U-BOLTS TO SECURE THE GATE WHEEL TO THE GATE. (FIG. 2 & 3)
4. WHEN THE GATE WHEEL IS LOCATED AS DESIRED, INSERT SUPPLIED SELF-DRILLING HEXHEAD SET SCREW. (FIG. 3)
5. OPEN AND CLOSE GATE TO ENSURE GATE WHEEL OPERATES SMOOTHLY.


FIG. 3

FIG. 1

FIG. 2

GW3 GATE WHEEL MOUNTING INSTRUCTIONS

CHANGING MOUNTING ORIENTATION:

1. MANUALLY COMPRESS SPRING AND REMOVE THE STEM PIN. IF THE STEM PIN IS NOT EASILY REMOVED, USE A HAMMER AND PUNCH AND **LIGHTLY** TAP THE STEM PIN OUT OF THE WHEEL STEM.

NOTE: TAKE CARE NOT TO DE-FORM THE STEM PIN DURING REMOVAL.

2. SLIDE WHEEL STEM OUT OF THE BRACKET. IF POSSIBLE, HOLD SPRING AND WASHERS IN PLACE.
3. ROTATE BRACKET 180 deg. AND RE-ASSEMBLE.
4. COMPRESS SPRING AND RE-INSTALL STEM PIN AND MOUNT GATE WHEEL AS INSTRUCTED.

