



Instructions:

Notes:

- *Gate spring must be installed on the same side and face as the hinges.*
 - *The end of the gate spring with multiple holes for the stop pin must be on top.*
 - *The gate spring must be slanted to the right but as vertical as possible when installed.*
1. *Hold the gate spring against the gate and post and mark the hole locations.*
 2. *Drill four pilot holes 1.25" deep. Use ϕ 1/8" in soft material or ϕ 5/32" in hard material.*
 3. *Install gate spring with the 4 included #12 x 1" screws.*
 4. *Turn the top clockwise using the adjustment rod and insert stop pin to prevent unwinding.*
 5. *Test gate and repeat step 4 if more closing force is desired.*