NW6260

REV. 00 04/08/14

BY: CGS


WOOD GATE FRAME

www.nationwideindustries.com

INSTALLATION, ADJUSTMENT AND MAINTENANCE INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

- 1): CUT (2) 2 x 4's 2" SHORTER THAN THE GATE OPENING
- 2): USING THE (12) #10 x 1.5" SCREWS, ATTACH 2 x 4's TO FRAME AS SHOWN IN FIG. 1
- 3): NAIL GATE BOARDS TO 2 x 4's AS SHOWN IN FIG. 2
- 4): MOUNT THE COMPLETED GATE TO FENCE POST USING THE 3/8" x 3" LAG SCREWS AS SHOWN IN FIG. 3
- 5) FOR DOUBLE GATE SET-UP, USE (2) PAIR OF GATE FRAMES. FIG. 4

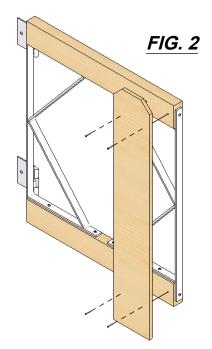

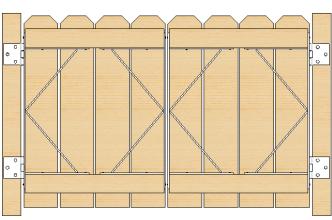
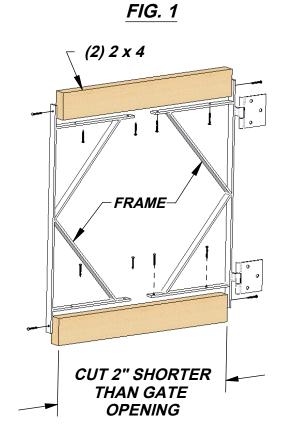


FIG. 4 DOUBLE GATE



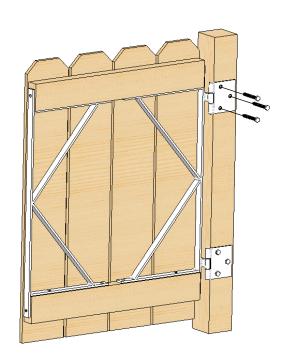


FIG. 3 SINGLE GATE