

"RUSTIC" HD STRAP HINGE

- 1) LOCATE THE HINGE STRAPS AT THE DESIRED HEIGHT ON THE GATE. POSITION STRAPS SO THAT THE PINNED END PROTRUDES OVER THE EDGE OF THE GATE ENOUGH TO ENSURE THE MOUNTING BRACKETS CAN BE MOUNTED TO THE POST AS REQUIRED.

APPROX. 3/4" TO 1" FROM THE EDGE OF THE SQUARE HOLE.
- 2) MARK THE LOCATIONS OF THE MOUNTING HOLES ON THE GATE. DRILL ϕ 1/8" SIZED PILOT HOLES FOR THE #12 MOUNTING SCREWS (THE BEVELED HOLES) AND DRILL A ϕ 7/16" THRU HOLE FOR THE 3/8" CARRIAGE BOLT (SQUARED HOLE).
- 3) USING THE SUPPLIED MOUNTING HARDWARE AND MAKING SURE THE STRAPS ARE PERPENDICULAR TO THE POST, ATTACH STRAPS TO GATE.
- 4) BLOCK GATE TO THE DESIRED POSITION BETWEEN POSTS. LOCATE AND MARK THE MOUNTING HOLES OF BOTH BOTTOM MOUNTING BRACKETS. DRILL ϕ 1/8" SIZED PILOT HOLES FOR THE TOP MOUNTING HOLES AS SHOWN IN FIG. 1. USING (2) SCREWS PER BRACKET, MOUNT BOTTOM BRACKETS AND GATE TO THE POST.
- 5) REMOVE BLOCKING AND CHECK GATE FOR FUNCTIONALITY. IF GATE FUNCTIONS PROPER, COMPLETE INSTALLING THE REMAINING BOTTOM BRACKET MOUNTING SCREWS AND INSTALL TOP MOUNTING BRACKETS.

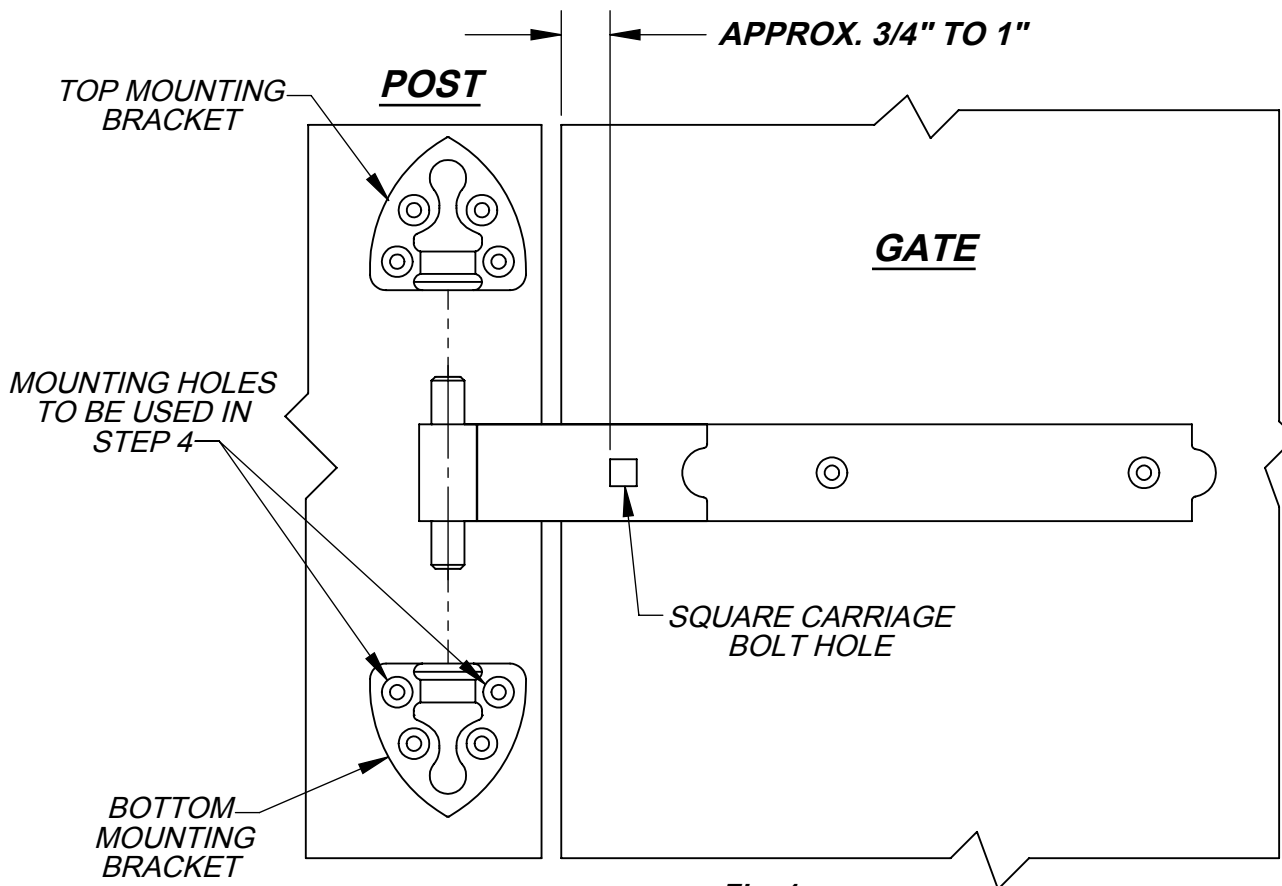


Fig. 1