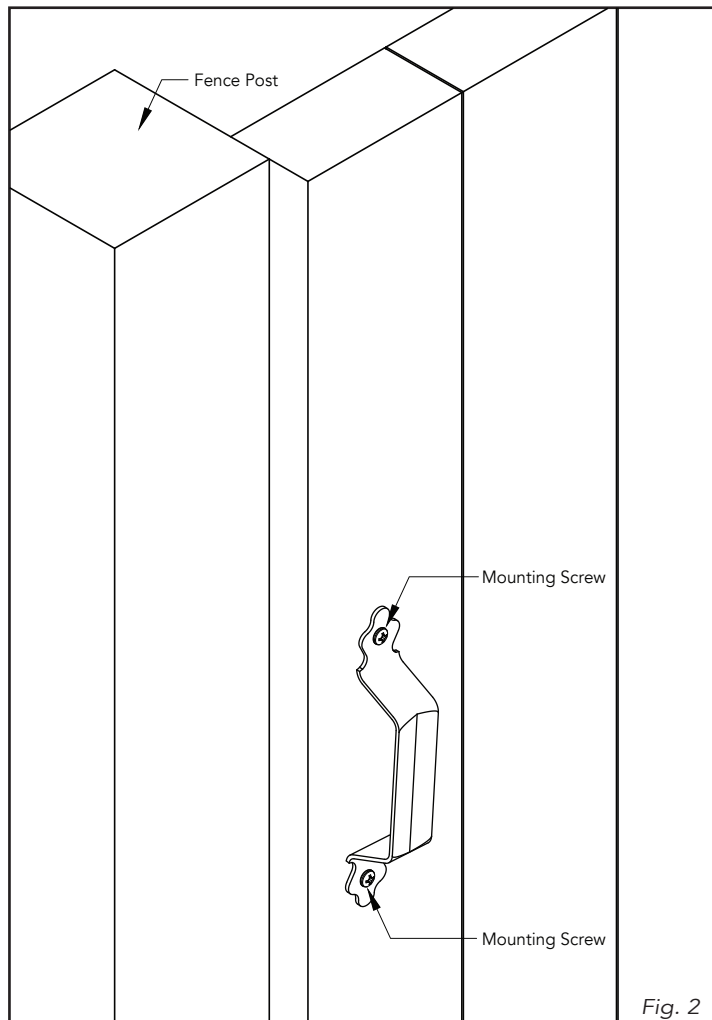
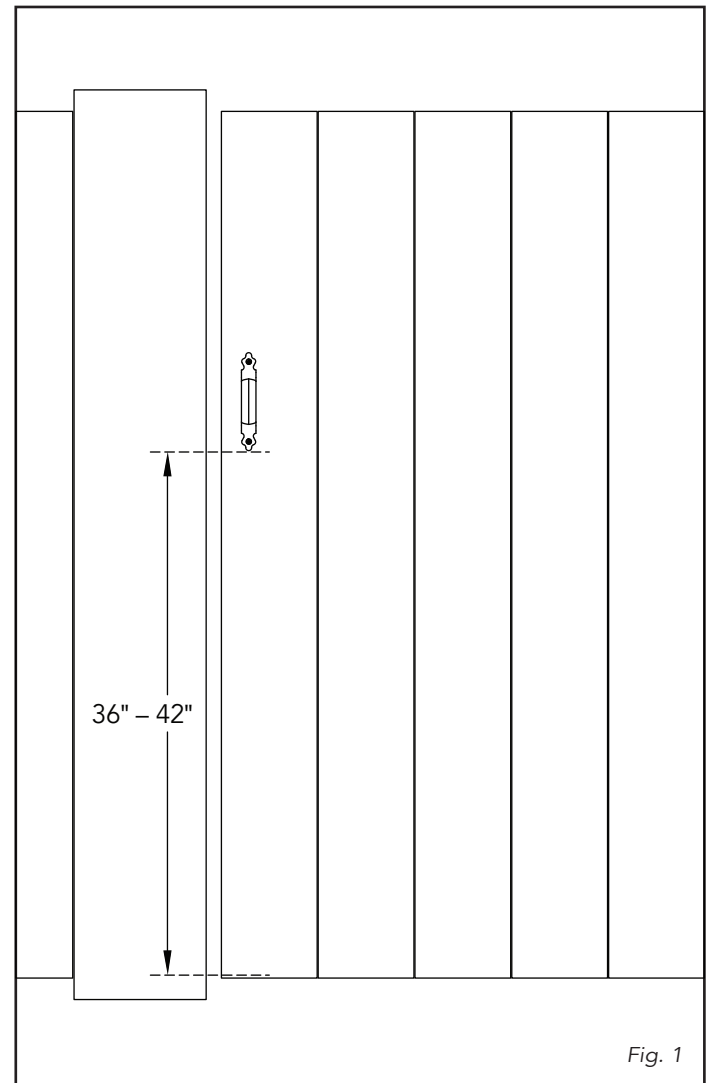


6" STANDARD GATE HANDLE

NW257-26QSCAN FOR MORE
INFORMATION**INSTRUCTIONS**

1. Position the handle. Install vertically on the gate pull side, typically approx. 36" – 42" off the ground (Fig. 1).
2. Hold the handle in place and mark the two mounting hole locations (Fig. 2).
3. Pre-drill holes by using a 3/32" bit to help reduce splitting (optional, but recommended).
4. Attach the handle with included mounting hardware (Fig. 2).
5. Test gate operation.

*Fig. 2**Fig. 1*