


NYLON GATE HANDLE


NW314S-BK




INSTRUCTIONS

- 1. Install vertically on the gate pull side at about head height (approx. 36" 42") or where it feels most comfortable (Fig. 1 & 2).
- 2. Hold the handle in place and mark the two screw hole locations (Fig. 2 & 3).
- 3. To prevent splitting, pre-drill shallow pilot holes using a 3/32" bit (optional, but recommended).
- 4. Drive the provided mounting hardware through the handle flanges into the gate and tighten.
- 5. Test gate operation.

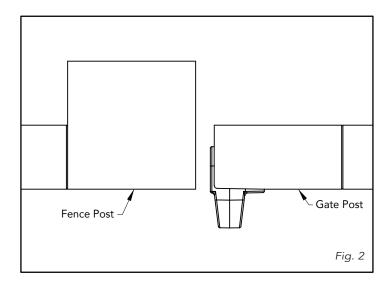

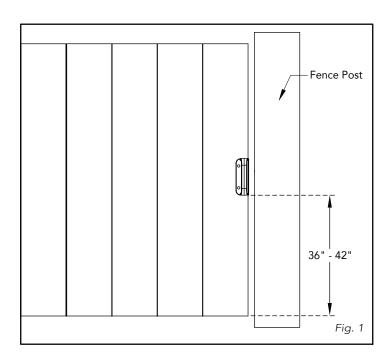

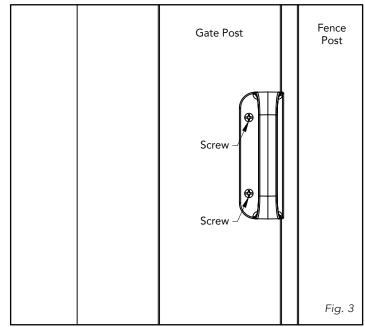

NWI-738400-110425