


CONTEMPORARY GATE LATCH


NW38310Q



INSTRUCTIONS

- 1. Hold the latch against the post at your desired latch height and ensure it is level (Fig. 1).
- 2. Mark the four mounting holes and pre-drill holes using a 7/32" drill bit (optional but recommended).
- 3. Fasten the latch to the post using the (4) 5/16" x 1-3/4" lag screws.
- 4. Align the striker bar on the gate frame so it fits securely into the latch when closed. Mark hole locations, pre-drill, and attach with the (2) 1/4" x 1-1/4" lag screws (Fig. 2).
- 5. On the opposite side of the gate, align the handle with the latch shaft (Fig. 2).
- 6. Insert the 1/4" 20 x 1-1/4" screw through the handle and gate, and secure with the washer and nut on the inside.
- 7. Test gate operation to ensure smooth latch engagement and alignment and adjust if needed.

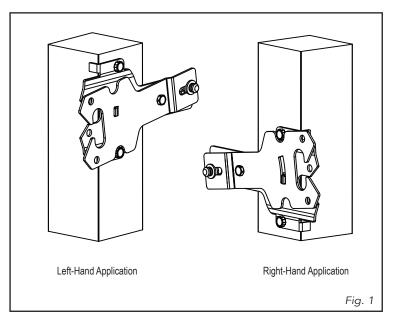

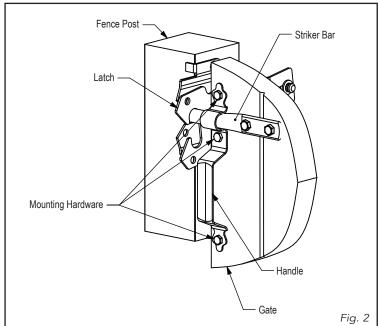

NWI-738400-110425