

9" ORNAMENTAL HANDLE

NW38396Q



SCAN FOR MORE
INFORMATION

INSTRUCTIONS

1. Place handle at desired location (Fig. 1).
2. Mark the location of the 2 screw holes (Fig. 1).
3. Drill pilot holes 1" deep. Use 5/32" in soft material or 11/64" in hard material.
4. Install using the 2 included #14 3/4" screws (Fig. 2).

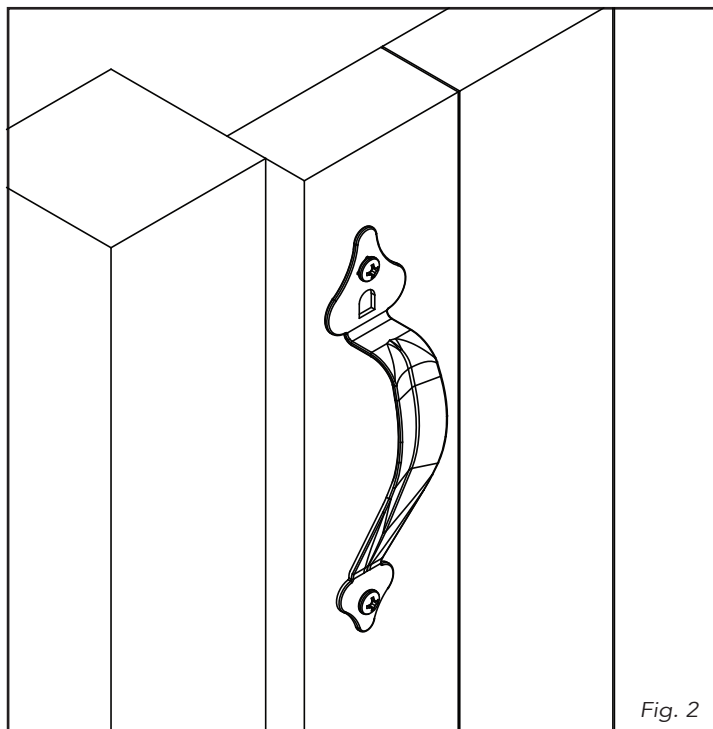


Fig. 2

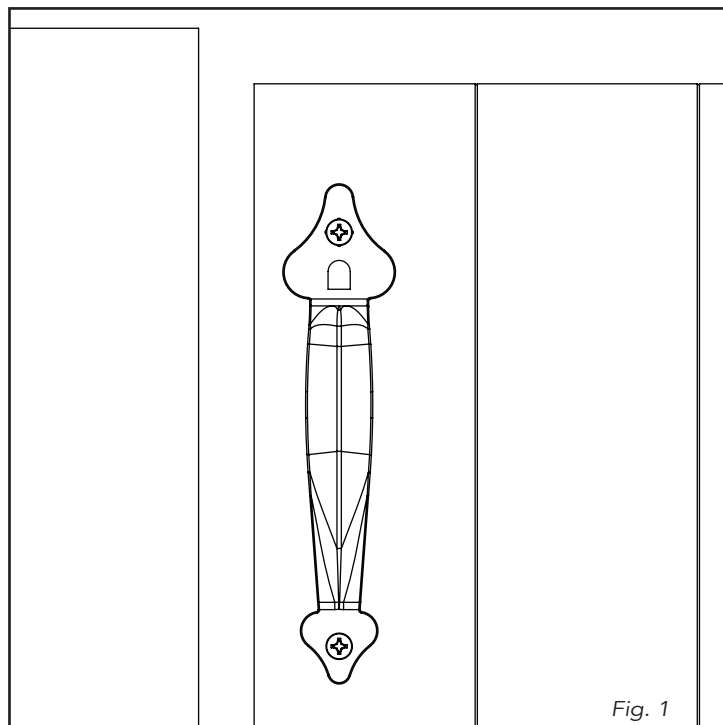


Fig. 1