

10" ORNAMENTAL T-HINGE

NW38933FMDQSCAN FOR MORE
INFORMATION**INSTRUCTIONS**

1. Ensure the gate is square and in the desired closed position (Fig. 1).
2. Place one hinge approximately 6" – 8" from the top of the gate and the second 6" – 8" from the bottom (Fig. 1).
3. Align hinge leaf on the gate post and wing on the gate. Mark all mounting holes.
4. Using a 5/16" bit, pre-drill holes to avoid wood splitting — approximately 2" deep. (Optional, but recommended).
5. Secure hinge leaf to the post using provided lag screws or carriage bolts with washers and jam nuts (Fig. 1).
6. Secure hinge wing to the gate in the same manner.
7. Check alignment and test gate operation.

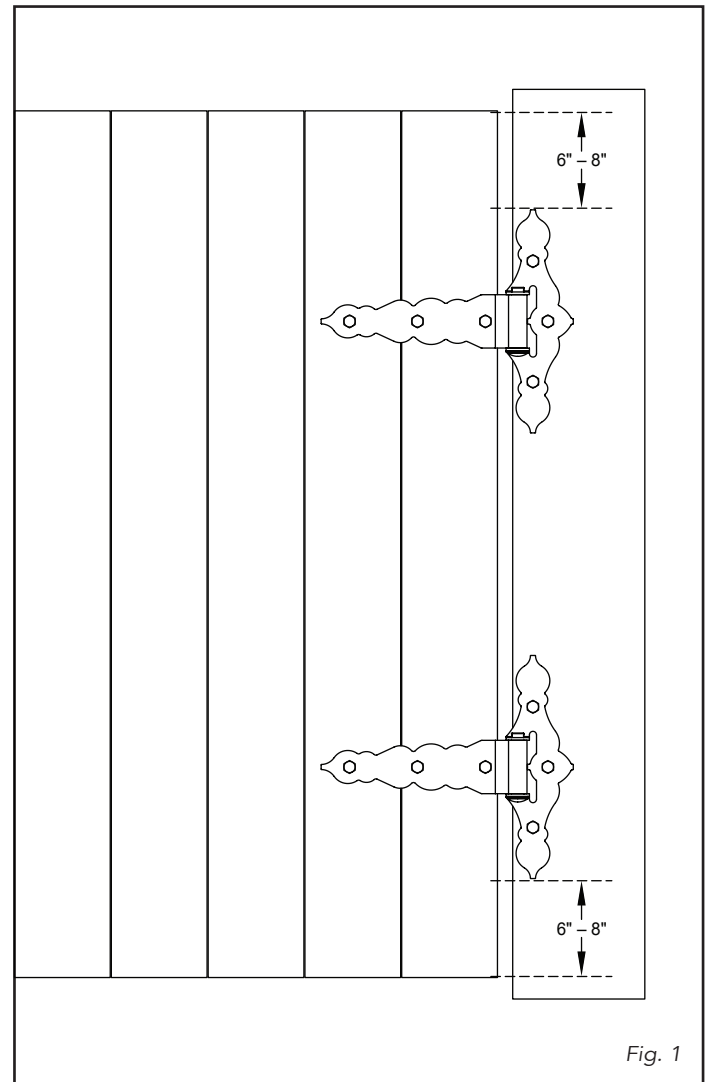


Fig. 1