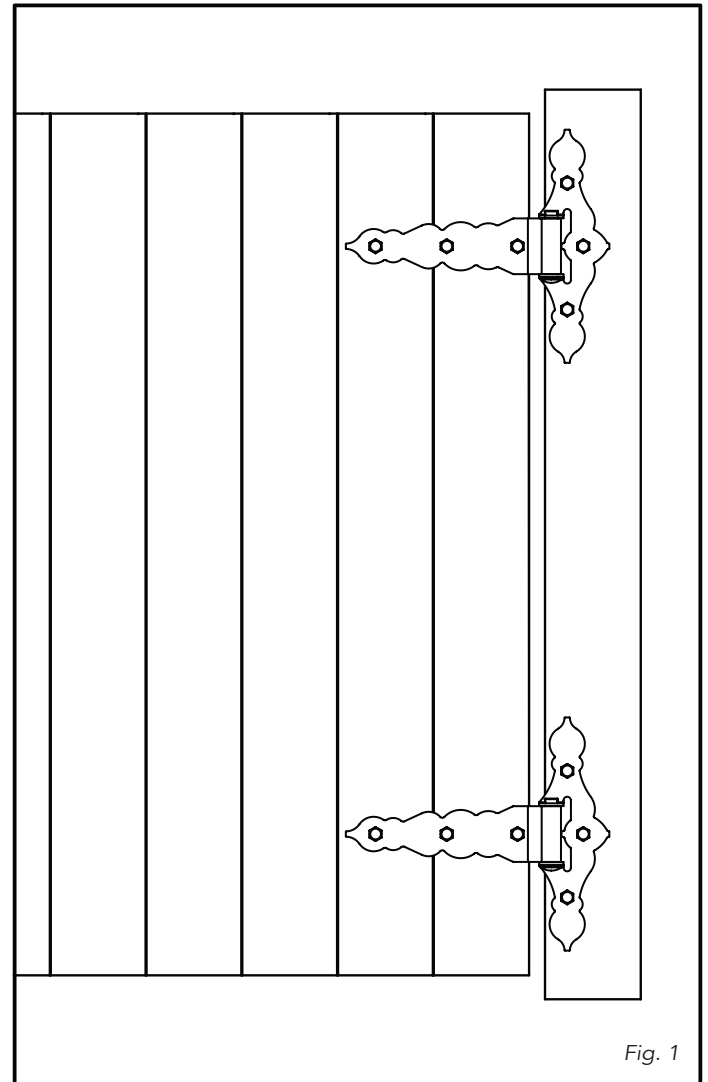


12" ORNAMENTAL T-HINGE

NW38935QSCAN FOR MORE
INFORMATION**INSTRUCTIONS**

1. Place the long strap flat along the gate edge (strap side on the gate).
2. Mount the short, square 'T' portion to the gate post (Fig. 1).
3. With the hinge closed, use a pencil to mark the screw or bolt holes on both blade and post (Fig. 1).
4. Pre-Drill Pilot Holes.
5. Attach the strap portion to the gate and the T-shank to the post .
6. Use lag screws or thru-bolts as recommended.
7. Test gate operation.

*Fig. 1*