

8" ORNAMENTAL T-HINGE

NW38937HDQ



SCAN FOR MORE
INFORMATION

INSTRUCTIONS

NOTE: Hinges should be positioned over the cross beams on the back of the gate.

1. Fix gate in desired location (Fig. 1).
2. Place hinges at desired location near the top and bottom of the gate and mark the 6 hole locations on each hinge (Fig. 1).
3. Drill 12 pilot holes 2" deep with a 7/32" drill.
4. Mount each hinge with 6 included 5/16" x 1-3/4" lag bolts.
5. Test gate operation and adjust tension if needed.

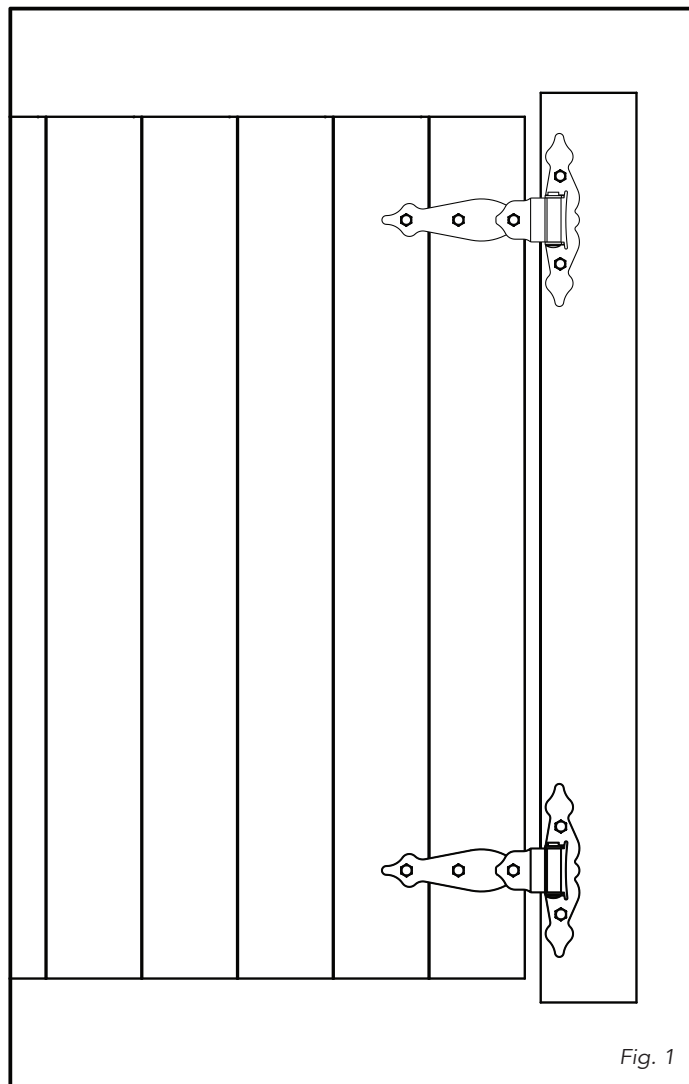


Fig. 1